




**Polaris Ranger 1000 Rear Panel Kit**  
**Kit p/n:1POLXP1000RP**  
**Fits UTV Models:**  
**POLARIS RANGER 900, XP 900, 1000 & XP 1000**

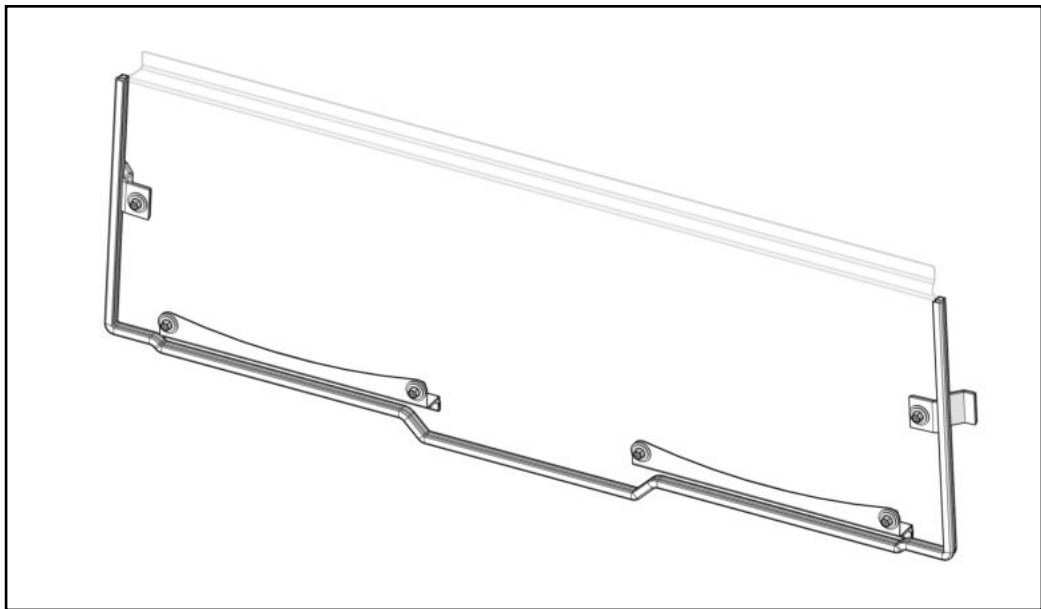

Available Options:

- 1. Door Kit (P/N: 1POLXP1000DR)
- 2. Windshield Kit (P/N: 1POLXP1000WS)
- 3. Roof Kit (P/N: 1POLXP1000RF)
- 4. Front Wiper Kit (P/N 1POLXP1000WK)
- 5. Side View Mirrors (P/N: 9PM5)
- 6. Door Restraint Kit (P/N: 1POLXP1000GS)

Approximate Installation Time *
Experienced Dealer Technician – 15 minutes
Average Dealer Technician – 20 minutes
Do-It-Yourself – 30 minutes

(\*=Not including accessories)


Approximate Product Specifications
Weight: 10.75 lbs.

**Register** your new product quickly online at [Curtiscab.com/product-registration/](http://Curtiscab.com/product-registration/)



Curtis encourages all customers to register their Curtis products. However, failure to do so will not diminish right to warranty. Curtis Industries does not sell or share your information with anyone else.

**Download** a digital copy of your installation instructions online at [Curtiscab.com/literature/](http://Curtiscab.com/literature/)



Curtis strives to continuously improve our products, technical documentation, etc. Therefore, the installation manual for this product may have been updated after your product was packaged. The latest revision of the installation manual can always be found at the website above.


The contents of this envelope are the property of the owner. Leave with the owner when installation is complete.

# CARE AND MAINTENANCE


- Check and tighten hardware after 40 hours of operation. Periodically inspect and tighten hardware for the remainder of the unit's life.
- **DO NOT** clean polycarbonate windows with harsh chemicals. It will damage the plastic. Mild soap and water should be used on the rear panel.

## POLARIS RANGER 1000 REAR PANEL KIT SERVICE PARTS

REAR PANEL W/ RUBBER  
P/N: 8SV-P-00136

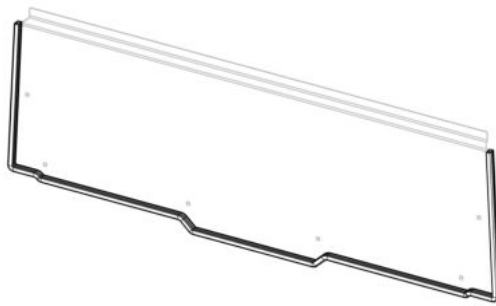




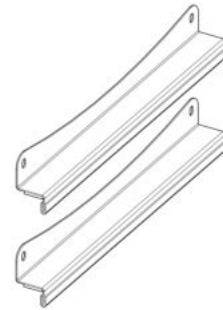

LOWER MNT BRACKET ASSY (SET OF 2)  
P/N: 8SV-113-00243



CLAMP BRACKET ASSEMBLY (SET OF 2)  
P/N: 8SV-110-00093



<p>3/4" SIDE BULB, 1/16" GRIP</p>  <p>9SV-PR17-5</p>	<p>TRIM LOK, STD, 1/16" - 1/8" GRIP</p>  <p>9SV-PRO1-20</p>	<p>FOAM TAPE, 1/8" X 2"</p>  <p>9SV-PR35-5</p>	<p>FOAM TAPE, 1/8" X 1"</p>  <p>9SV-PR39-5</p>	<p>7/16" SIDE BULB, 1/8" GRIP</p>  <p>9SV-PR58-10</p>
---	--	---	---	---